



Installation Instructions

Installation Methods

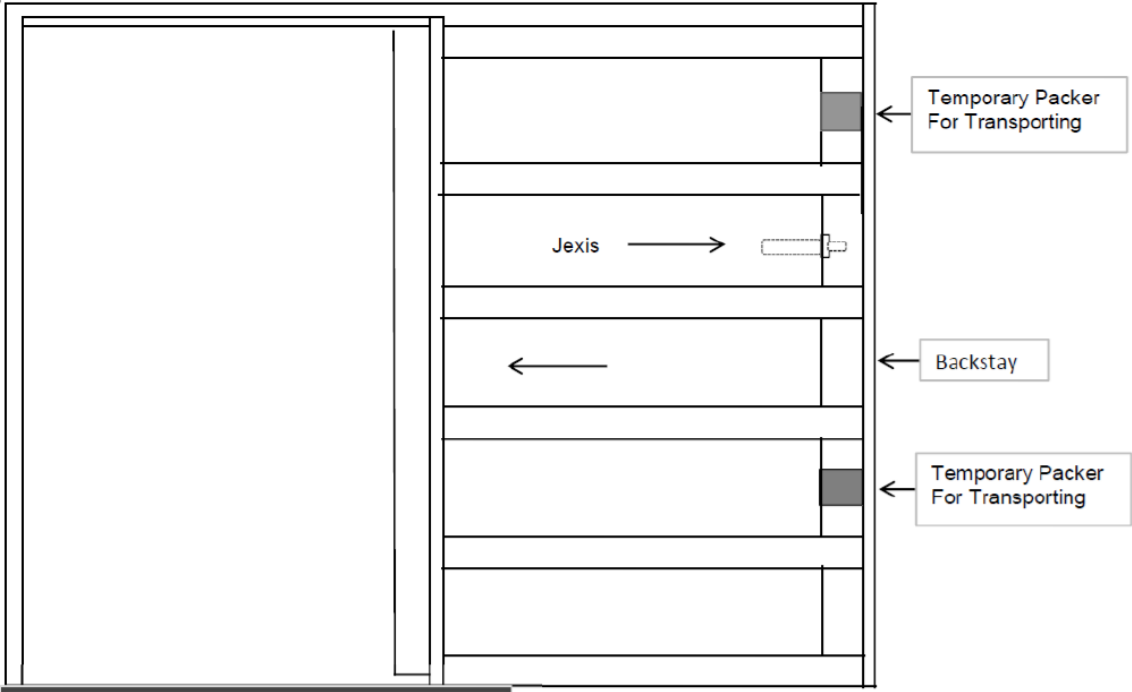

Product Performance

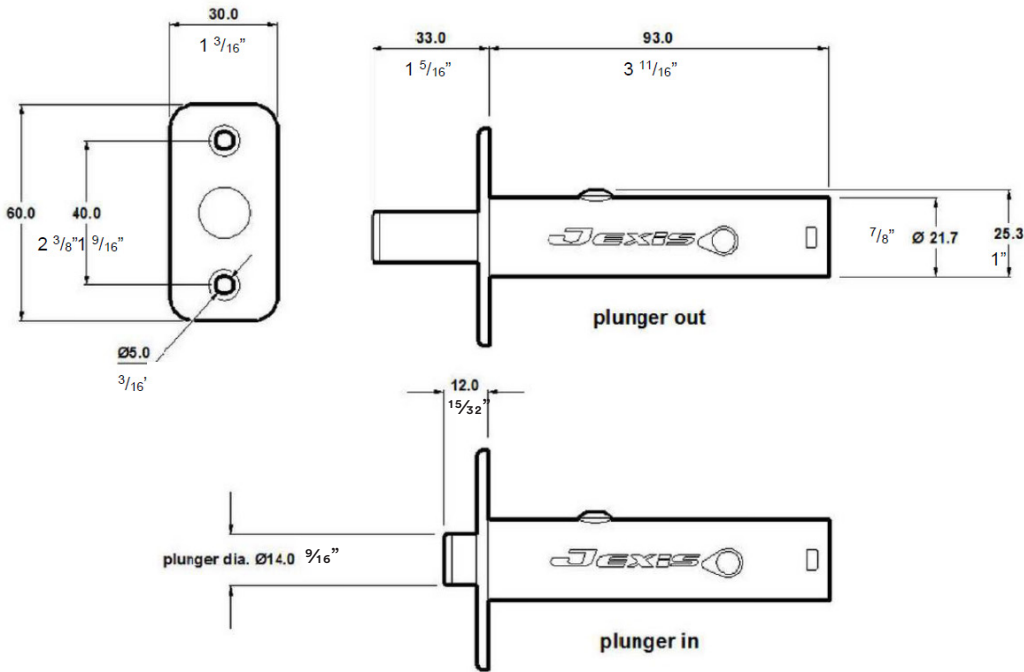

Installation Instructions


Fixing Detail

Installing a push-to-release Jexis on pocket doors is simple, quick and easy. The only tool needed is a drill, two bits and a couple of screws. No routing, no chiseling, no mess, no fuss. The mechanism is spring loaded and fitted to the back edge of the door by drilling a clearance hole into the door and fastened by two screws through the faceplate. This will allow the plunger shaft to eject out of the door and strike the back stay of the pocket propelling the door outward by approximately 12". Alternatively, the push-to-release Jexis can be mounted through the aluminum backstay allowing the plunger shaft to strike the back edge of the door propelling it forward.

Pre-Hanger Fitting Instructions:


1. With the back edge of the door facing you, measure and find height & centre eg: all doors = 3'11" up from bottom of door then find centre of door based on door thickness. Mark the door using a 1" speed bore bit drill a hole to the depth of 3.9".

As per option drawing A.

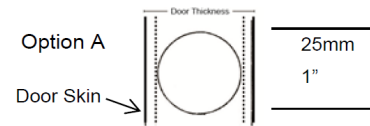

2. On particularly narrow doors with minimal clearances, an alternative option would be to drill a 7/8" hole and use a round rasp to cut some extra clearance.

As per option drawing B.

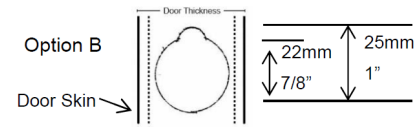

3. Place push-to-release Jexis in the drilled hole and secure with 2 x screws. Now your door is ready to be fitted.

Handy Hints:

- A. Allow half an inch clearance between the back edge of the door and the backstay (vertical component) of the pocket.
- B. If the door is slightly undersize in relation to the pocket. Place enough washers (packers) between the Jexis faceplate and the back edge of the door until the front edge of the door is flush with the opening Jamb.
- C. Alternatives if door is too wide buzz to required width.

DO NOT:

- 1. Check face plate into doors edge as this may impede the loading and release cycle of the push-to-release Jexis plunger.
- 2. Adjust body screw, this is a guide screw only preset in the manufacturing process.

Installation Instructions

Fixing Detail

Builders Sliding Pocket Doors Fitting Instructions (Installer):

1. N.B. Backstay of sliding pocket door opposite the Jexis in door to have no screw fixings. Screw backstay to framing away from the release mechanism area.
 2. Pocket back stud and back edge of door must be plumb allowing the gap between door and back stud to be parallel and clear of any foreign objects.
- Failure to do this could affect the smooth and positive feel of the push-to-release Jexis action.

Handy Hints:

A. There must be no excessive high spots between the back edge of the door and aluminum backstay that might impede the loading and release cycle of the push-to-release Jexis plunger.

(A recommended option is to fix the backstay by screwing through the nog channels of the aluminum backstay clear of the back edge of the door.)

B. These instructions refer to an assembled pocket door all made up ready to fit in the trimmed hole. The aluminum backstay referred to is the back vertical component that forms part of the structural frame.

C. If the pocket door is to be built in position allow a clearance of half an inch between the back edge of the door and the stud or surface contact area for the push-to-release Jexis plunger.

DO NOT:

1. Check face plate into door edge as this may impede the loading and release cycle of the push-to-release Jexis plunger.
2. Adjust body screw, this is a guide screw only preset in the manufacturing process.